

PQ Labs - Enabling Night Club Mode in mac


Applies to: PQ Labs Touch Frames


Symptom(s): Intermittent Touch when Exposed to Intensely Lit Environments

Affected OS: MacOS


Prerequisite Software: [PQ Labs Mac Driver](#)

1. Download the **PQLabsMTDriver** by clicking the Link above.
2. When prompted with the Install click **Continue** on the next two Screens.

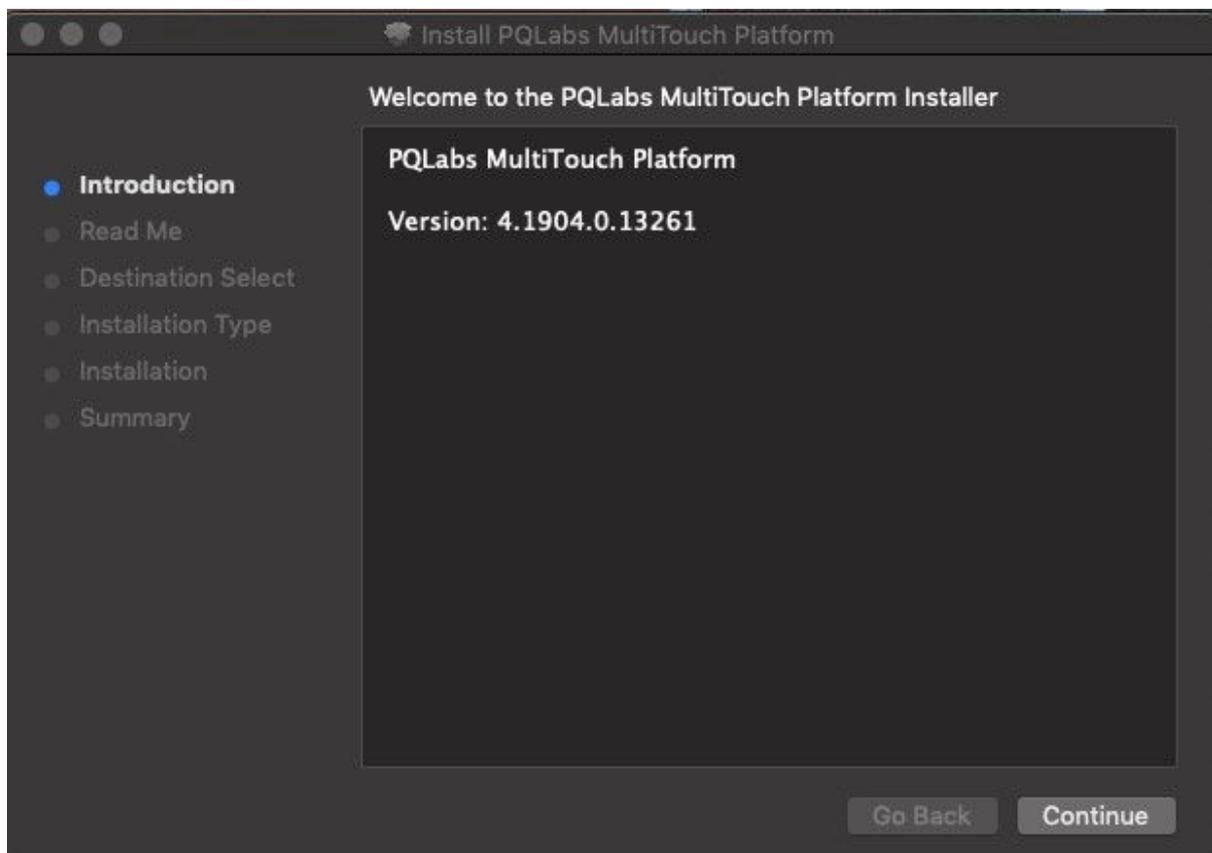

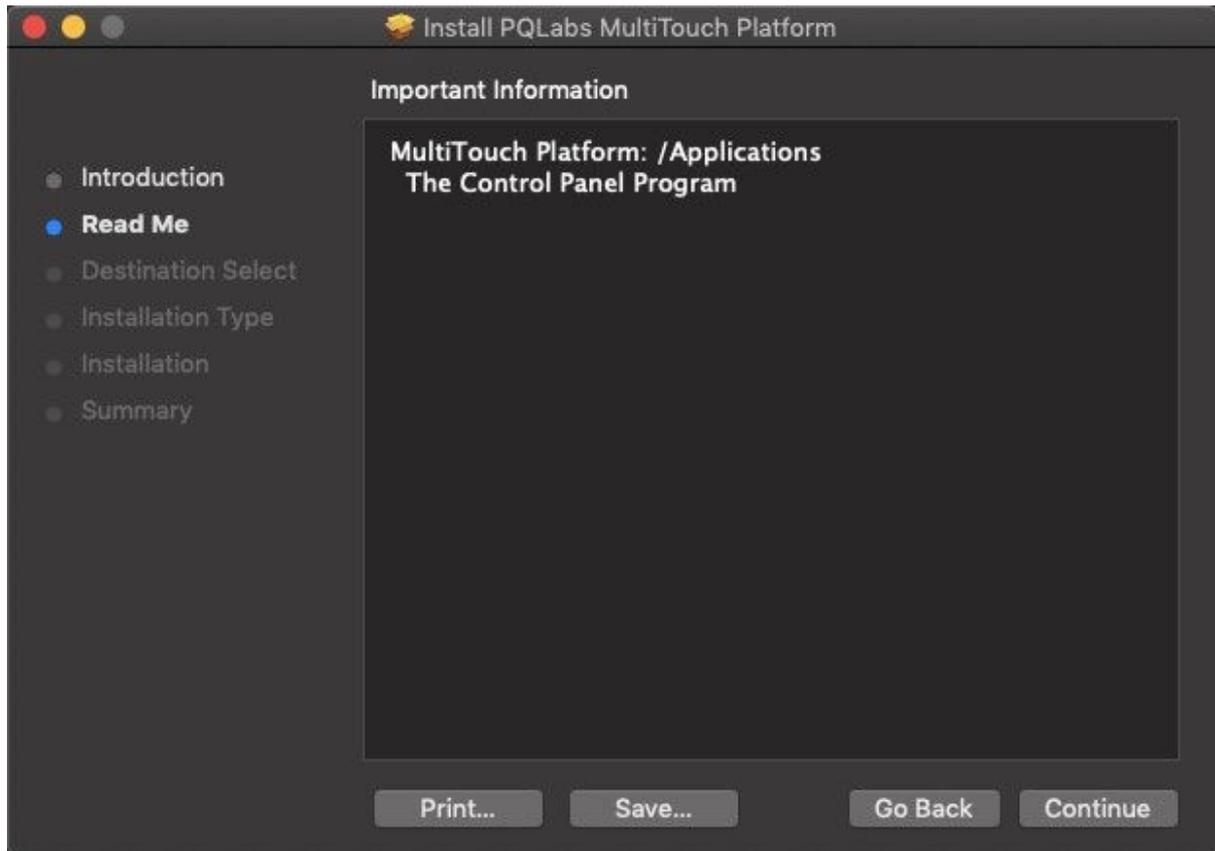


3. Select **Install**.

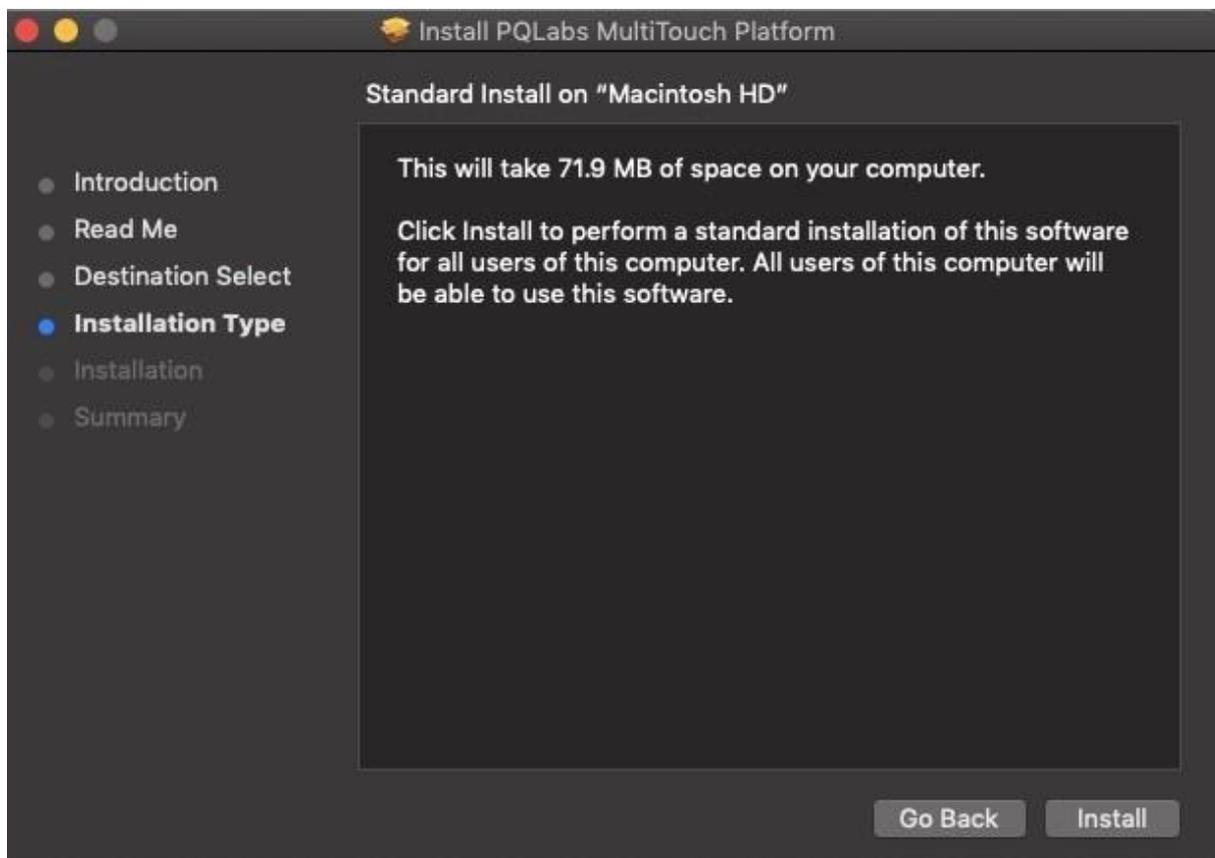

4. Select **Continue Installation**.



5. When Install is completed successfully, Select **Restart**.

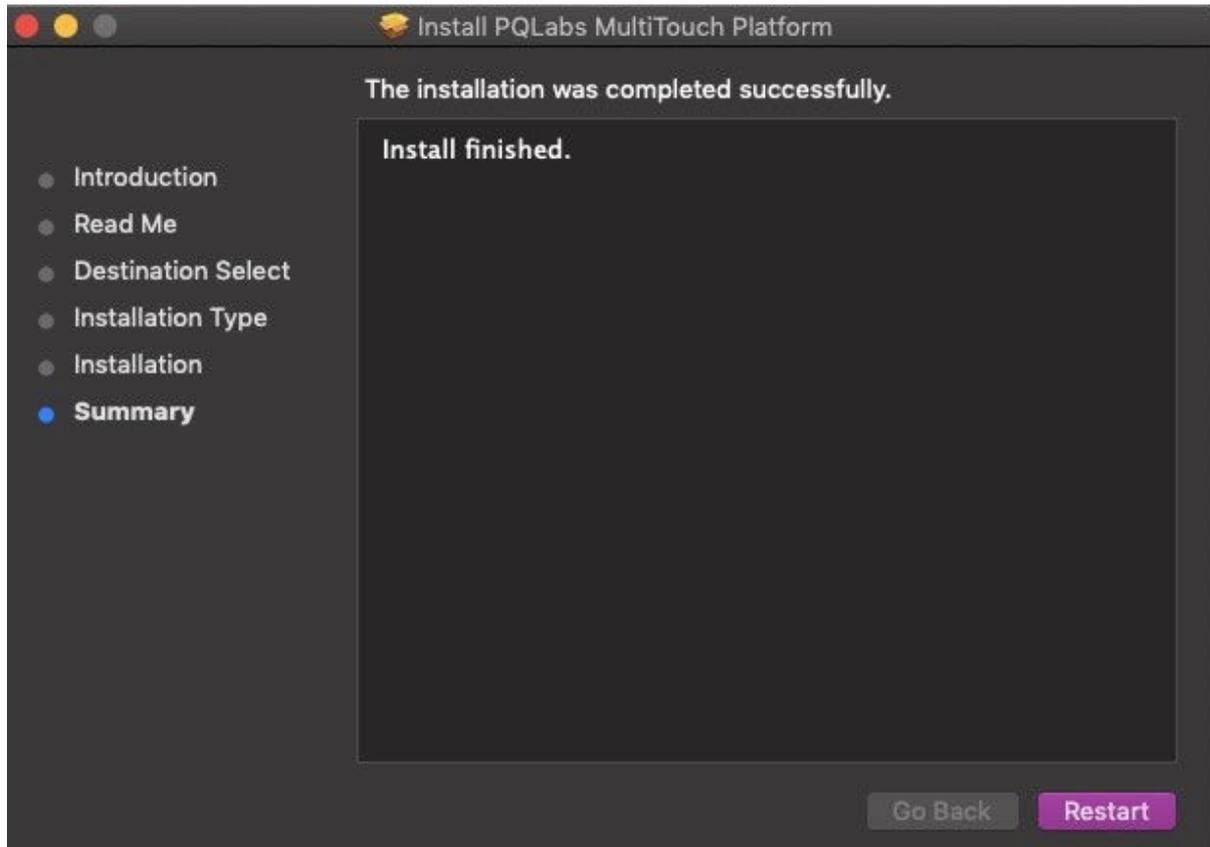

6. The MultiTouch Platform will be located in **Finder** under **Applications**:
First Selct **Finder**




Then under **Applications** select the **MultiTouchPlatform**.




For easier access, you can drag and drop the application to your Desktop.



7. With a PQ Labs touch device connected you will see the following window.

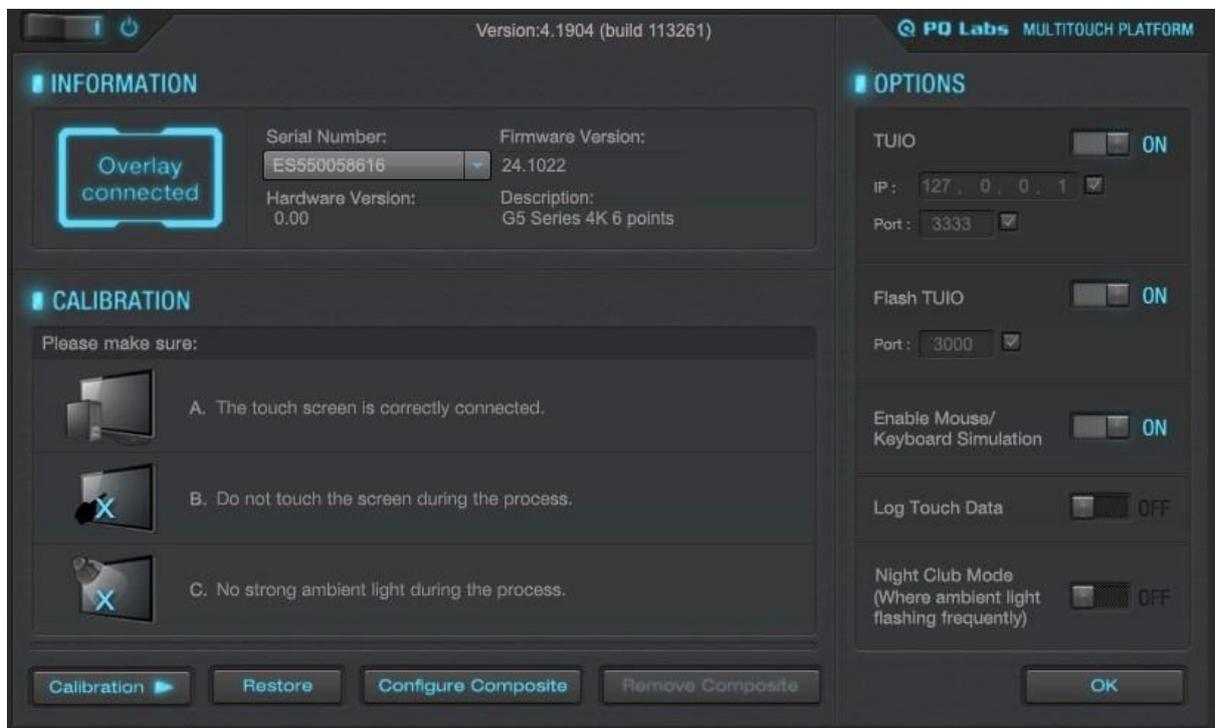

8. Enable Night Club Mode by turning the switch next to **Night Club Mode** to **ON**.

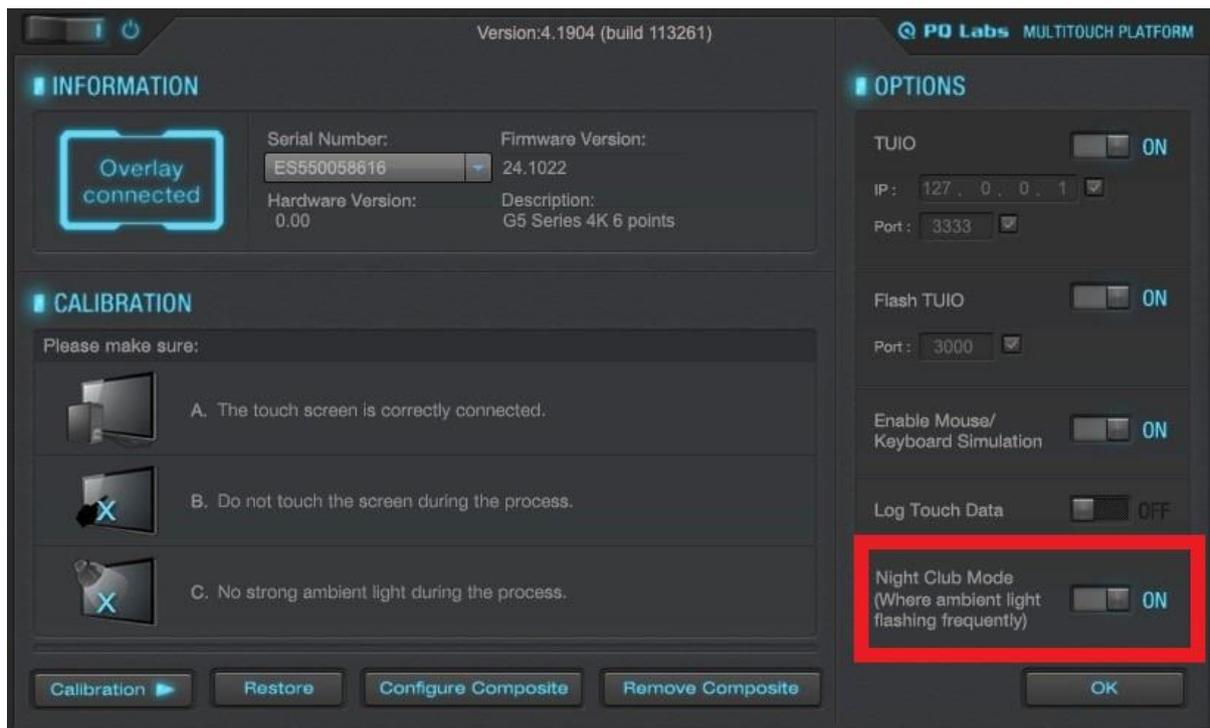

9. Disconnect the USB cable from the MacOS device and reconnect to the intended device. Touch should now function as expected in the new operating system.

10. If the above steps do not resolve the issue, please contact the TSI Touch Customer Service team at 802-874-0123 Option 2; email: support@tsitouch.com; or by visiting our [TSI Touch website](#) and clicking on the red "Help" icon in the lower right corner of the webpage.