

# PQ Labs - Enabling Night Club Mode in Windows

**Applies to:** PQ Labs Touch Frames


**Symptom(s):** Intermittent Touch when Exposed to Intensely Lit Environments


**Affected OS:** Windows 10

**Prerequisite Software:** [PQ Labs Windows Driver](#)


The following steps *must* be done in a Windows environment, even if your touch screen is being used with a different operating system. After connecting the touch screen USB to a Windows device, follow the steps below.

1. To download **PQ Labs Windows Driver**, click on the link above.
2. Follow the instructions as prompted to complete the download. Click the **Next** button and then click the **Install** button.

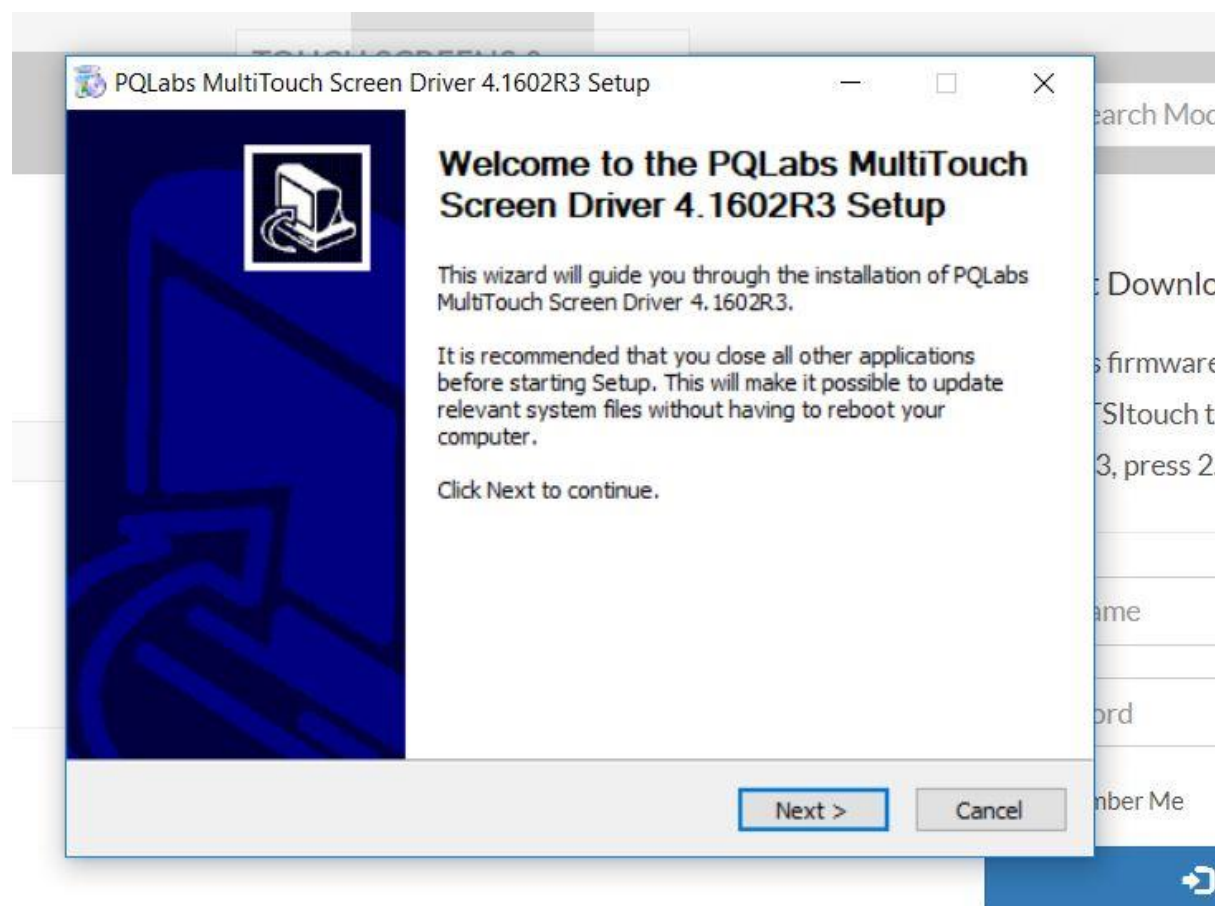


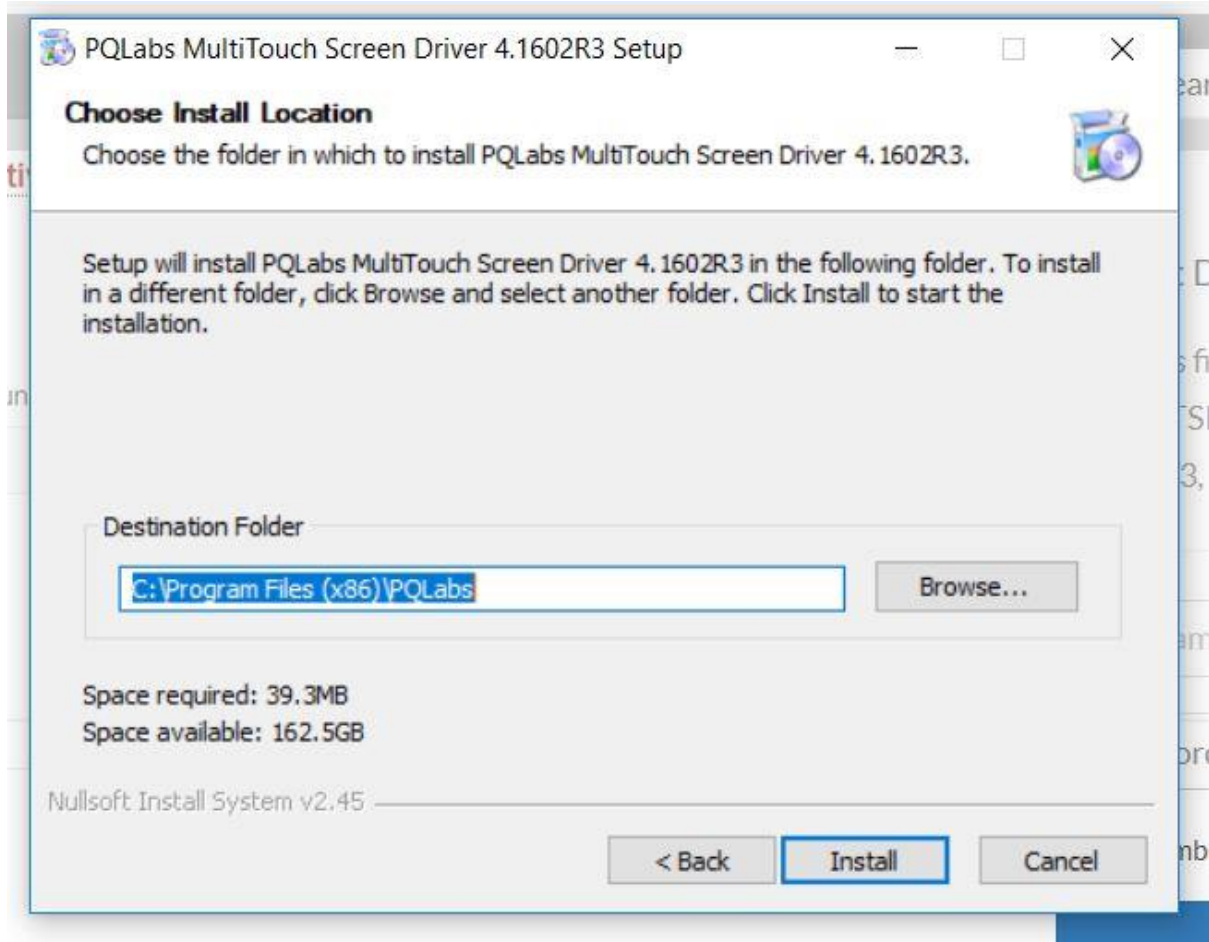


3. Once the download is complete, you will be prompted to restart your computer. It is recommended to restart your computer at this time. Select **Reboot** now and click **Finish**.

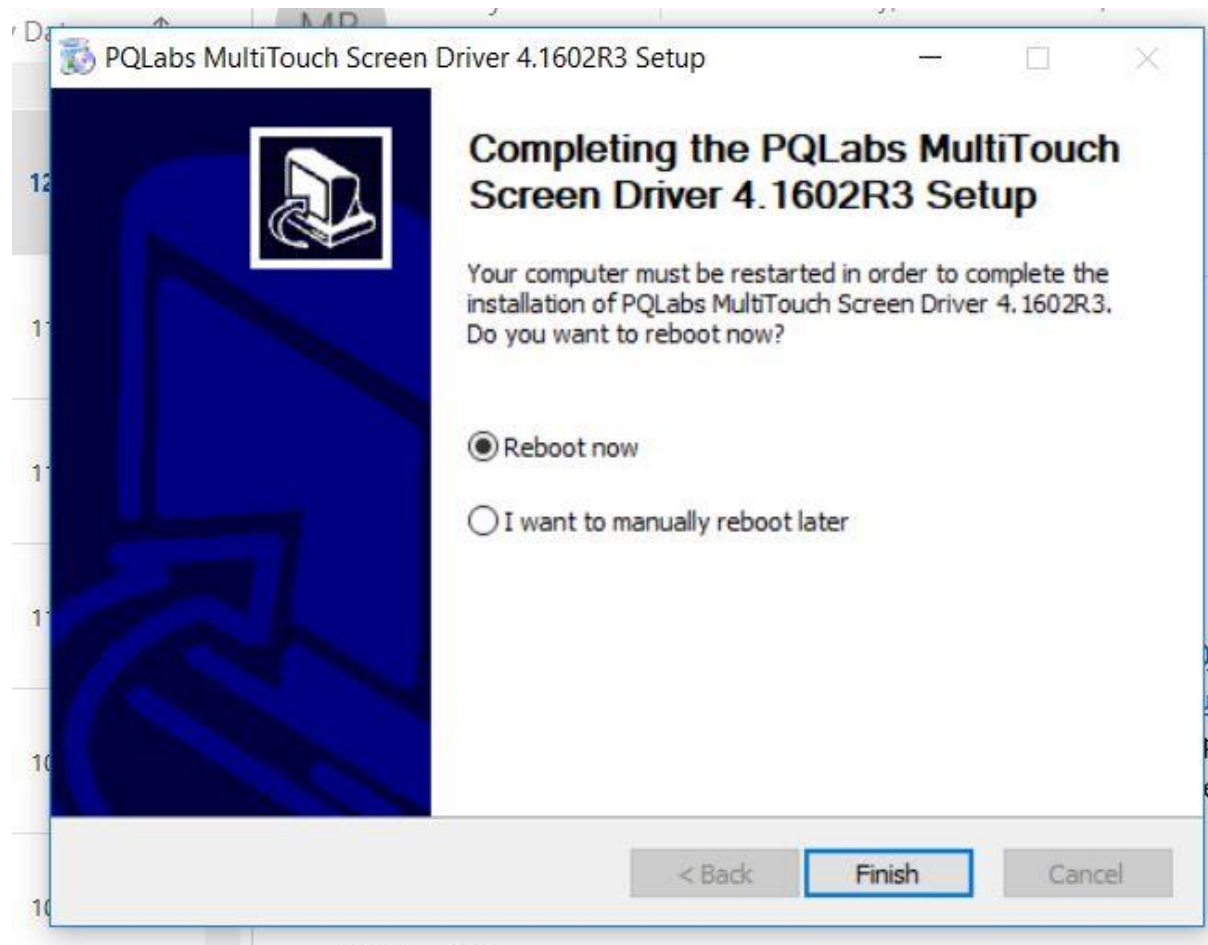

4. After your computer restarts, click on the Windows icon in the bottom left-hand corner of your screen to open the Start menu. Select **MultiTouchPlatform** under Recently added. If you are unable to find this application in your Start menu, you can perform a search using the Windows search bar located on the Taskbar. Should you be unable to find the application, you can try re-downloading using Steps 1 - 3. If further assistance is required, contact **TSI Touch Customer Service**.

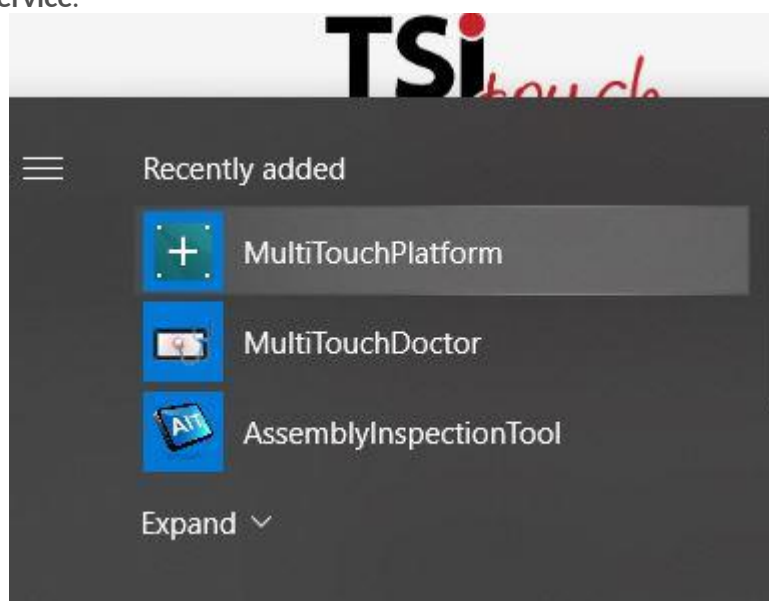

5. To enable Night Club Mode, select **Night Club Mode**, then click **Apply**.

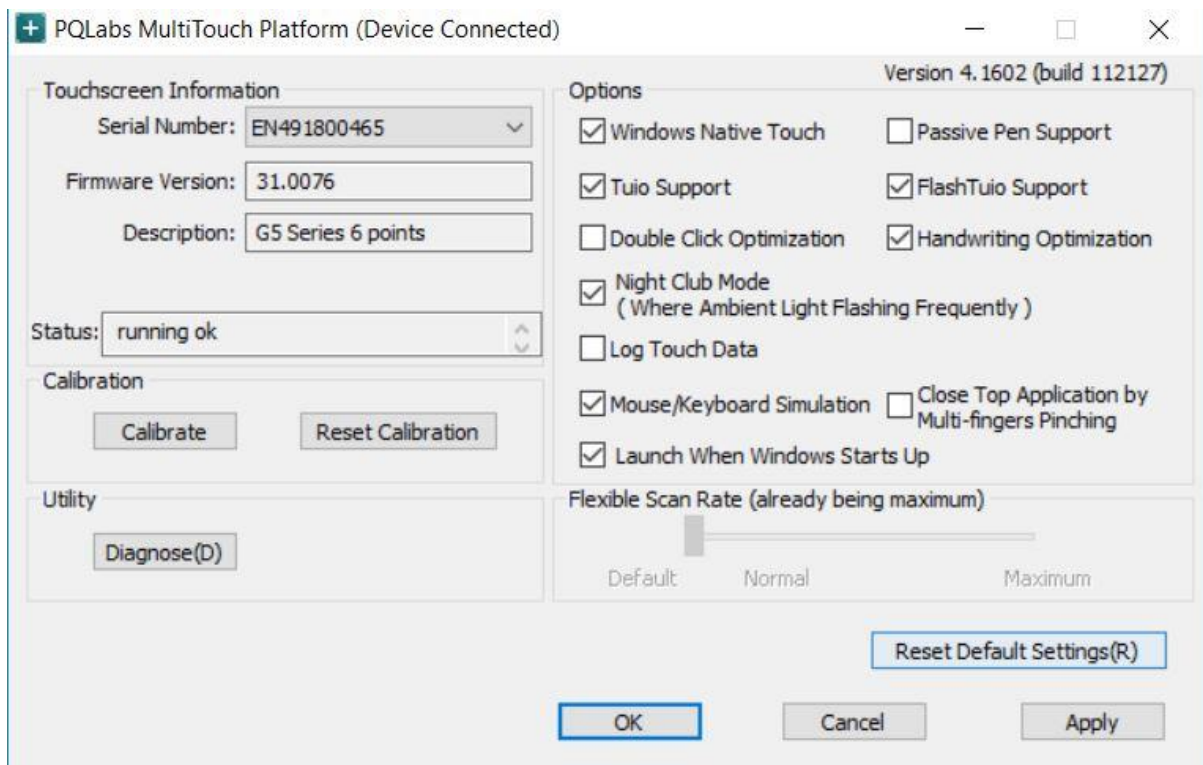

6. Disconnect the USB cable from the Windows device and reconnect to the intended device. Touch should now function as expected in the new operating system.

7. If the above steps do not resolve the issue, please contact the TSI Touch Customer Service team at 802-874-0123 Option 2; email: [support@tsitouch.com](mailto:support@tsitouch.com); or by visiting our [TSI Touch website](https://www.tsitouch.com) and clicking on the red “Help” icon in the lower right corner of the webpage.