

# Displax Tile Video Wall - Activating Touch


Applies to: Displax Tile Video Walls

Symptom(s): No Touch

Affected OS: Windows 10

Prerequisite Software: [Displax Connect x64](#), or [Displax Connect x32](#)

1. To download **Displax Connect** click on the link above that matches your version of Windows.
2. Click **Next** for the next four steps.

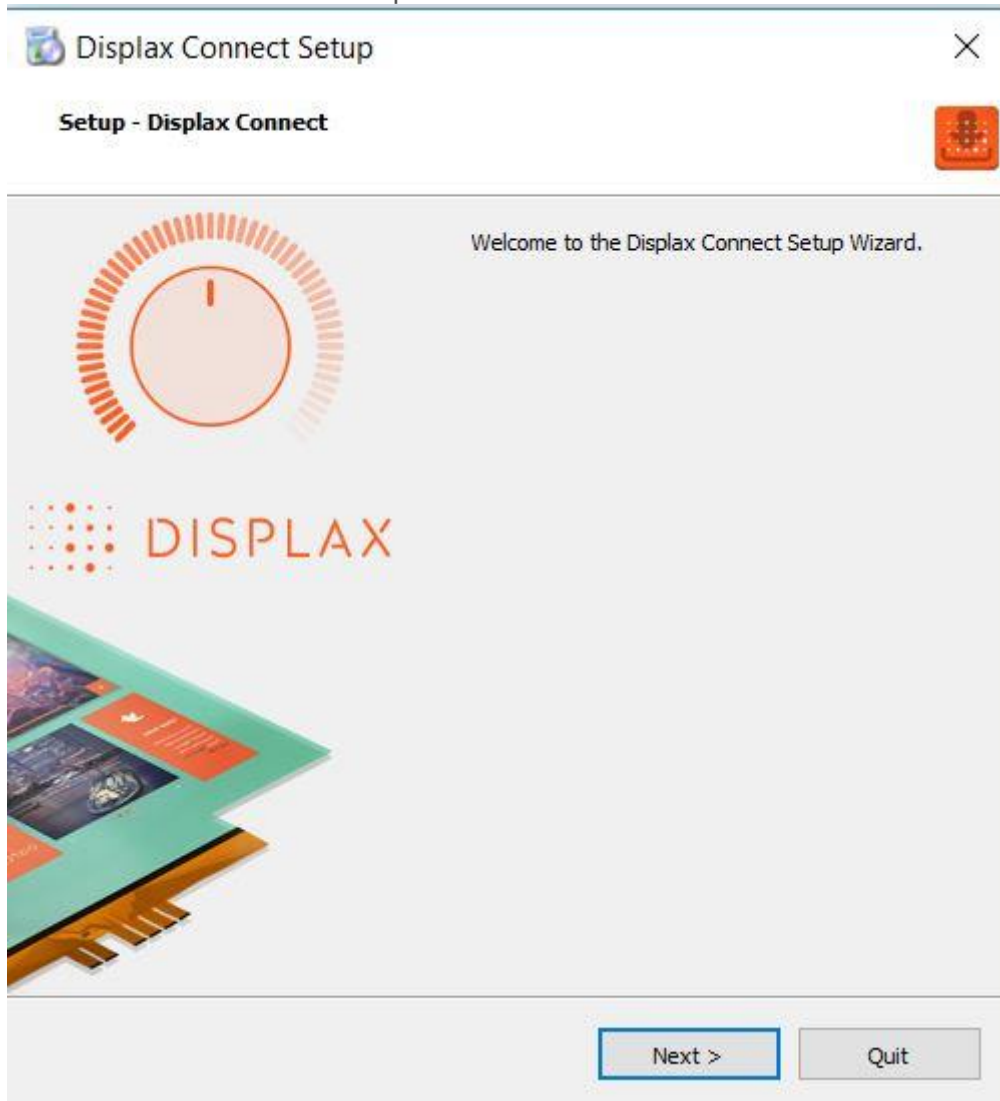

**Installation Folder**



Please specify the directory where Displax Connect will be installed.

C:\Program Files\DISPLAX

Browse...

< Back

Next >

Cancel

**License Agreement**

Please read the following license agreement. You must accept the terms contained in this agreement before continuing with the installation.



By accepting this End User License Agreement (EULA) or by downloading or using the software you signify that you have read and agree to all the terms of this license agreement.

**I. Preamble**

By pressing the "I accept the licence agreement" button below, User hereby indicates User's complete and unconditional acceptance of all the terms and conditions of this Agreement. This Agreement constitutes the complete agreement between User and DISPLAX with regard to User's access, download, and/or use of Content except in the case where User has a version of the Agreement signed by both parties, in which case the signed agreement will supersede this Agreement. Except for any signed agreement between DISPLAX and user, this agreement supersedes and replaces any other agreement that was or will be presented at the time of content installation.

If User does not agree to the terms of this Agreement, User must not select the "I accept the licence agreement" button below.

**II. Introduction.**

Please read this End User License Agreement ("EULA") carefully before using the Software. This EULA includes DISPLAX Privacy Policy located at [www.displax.com/privacy-policy/](http://www.displax.com/privacy-policy/), which is incorporated by this reference into this EULA. We have included several annotations in boxes to explain or emphasize key sections.

**a. Binding Agreement.**

This EULA constitutes a binding agreement between you and DISPLAX S.A. and its affiliates and subsidiaries ("DISPLAX," "we," or "us"). "You" and "users" mean all users of the Software. You accept this EULA each time you access the Software. If you do not accept this EULA, you must not use the Software. If you are under 18 years of age, you represent and agree that you possess the legal consent of your parent or guardian to access and use the Software.

**b. Revisions to EULA.**

We may revise this EULA at any time by posting an updated version, although we will endeavor to provide you with prior notice of any material changes to this EULA. Your continued use of the Software after a change to this EULA constitutes your binding acceptance of this EULA.

- I accept the license.  
 I do not accept the license.

&lt; Back

Next &gt;

Cancel



**Start Menu shortcuts**

Select the Start Menu in which you would like to create the program's shortcuts. You can also enter a name to create a new directory.



Displax Connect


- Accessibility
- Accessories
- Administrative Tools
- Bomgar
- Maintenance
- Startup
- System Tools
- Windows PowerShell

< Back


Next >

Cancel

3. Click **Install**.

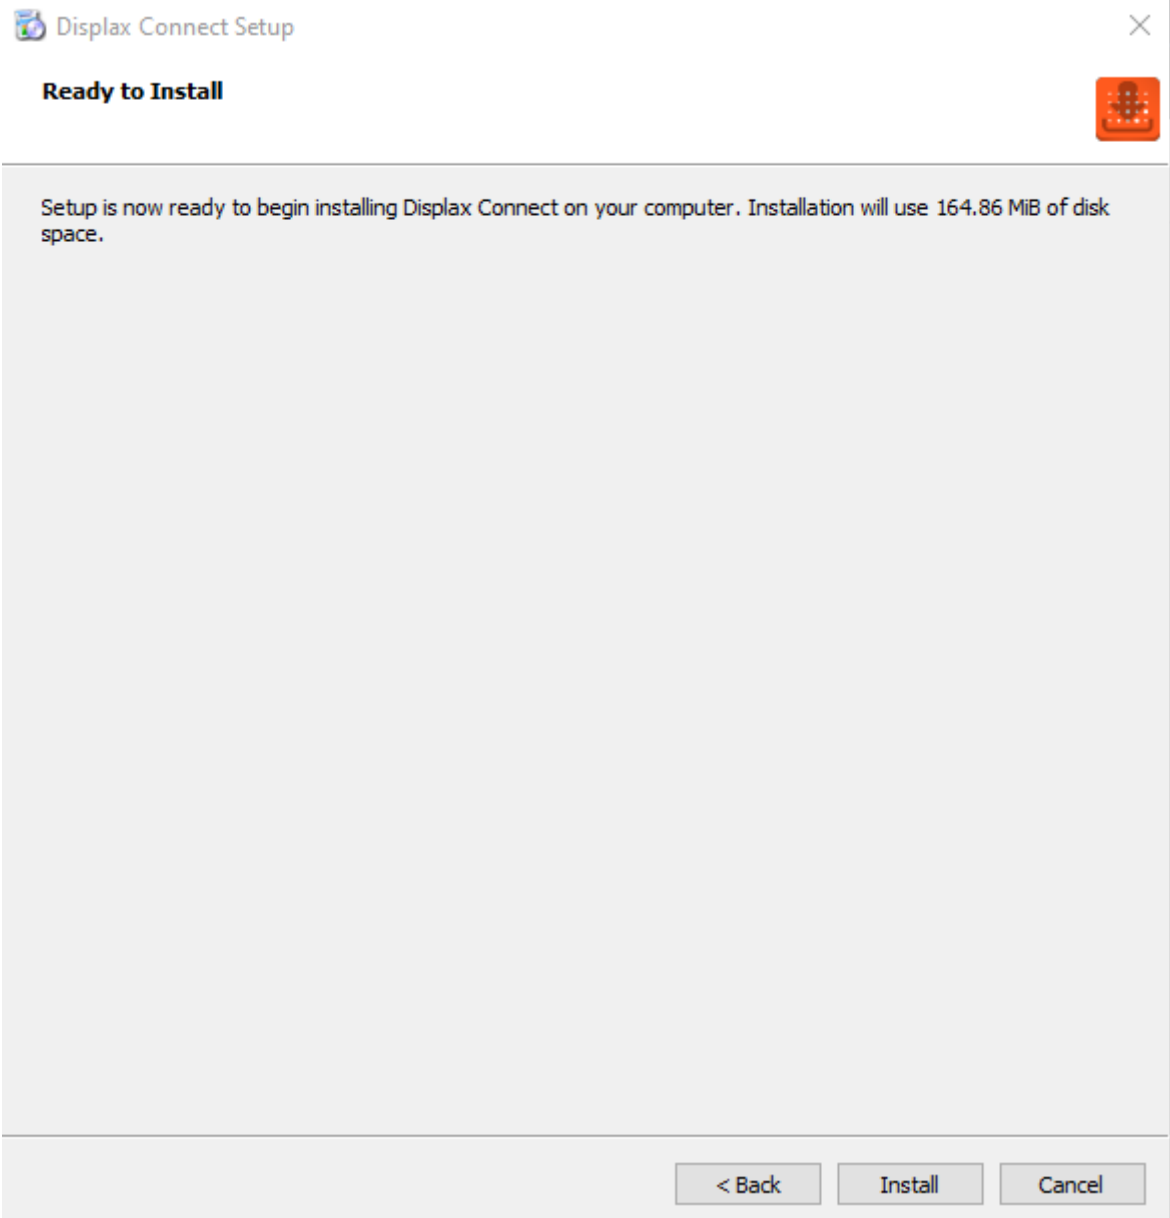

4. To complete this download, Click **Finish**.

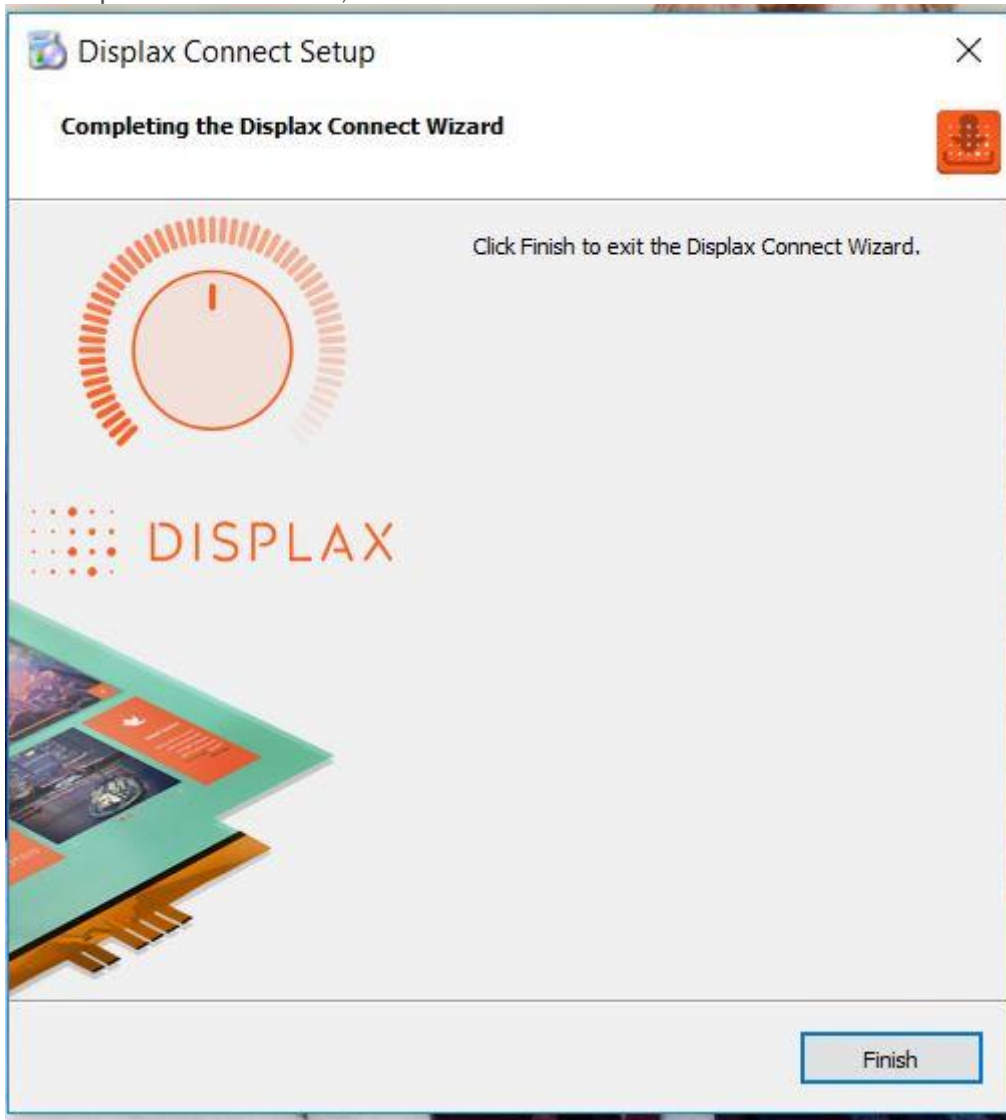

5. To open the **Displax Connect** program, double-click the icon on your desktop.




6. The following window will appear.



On a 2x2 Video Wall you will see 4 Controllers on the left hand margin, one for each monitor.


## Displax Connect

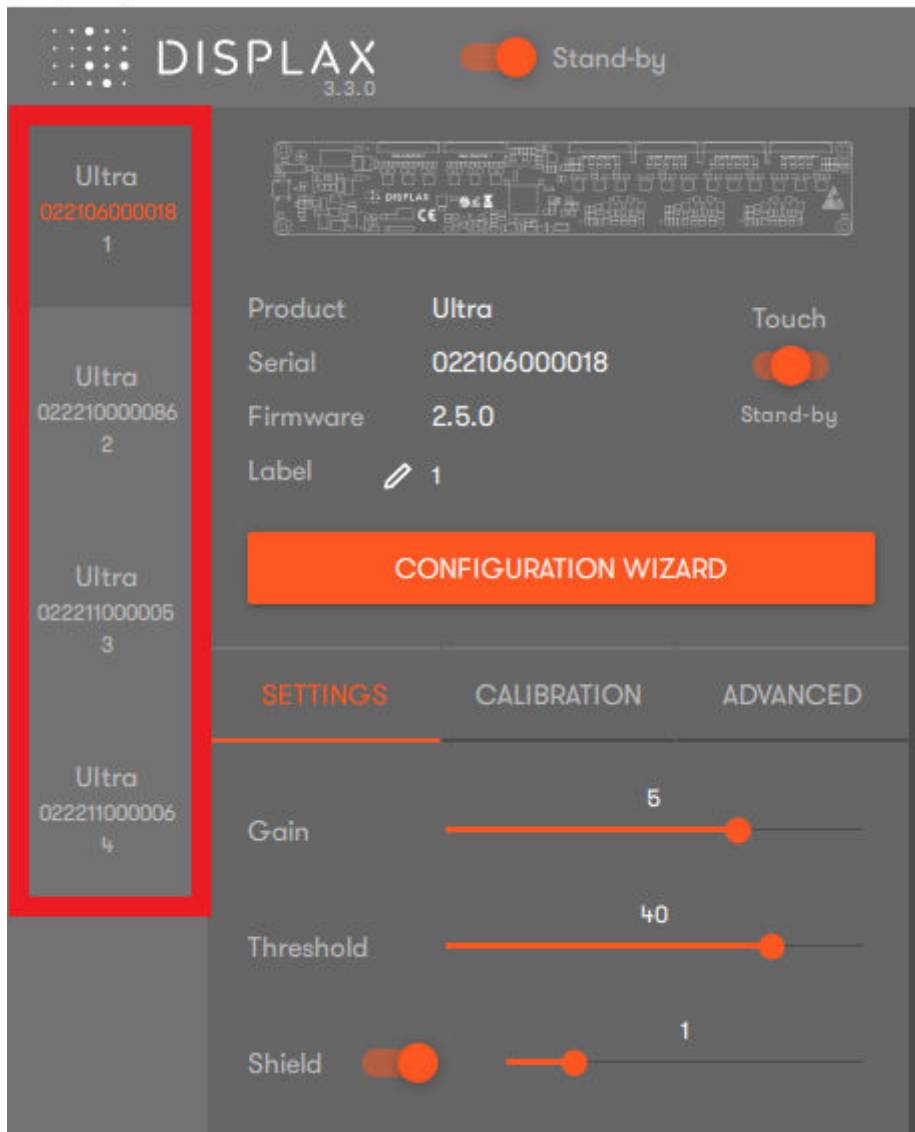

7. Activating Touch can be done separately for each monitor in the Video Wall.


To confirm which monitor corresponds with the selected controller, test each monitor one by one for Touch Detection. You will see touch points detected in Displax Connect.



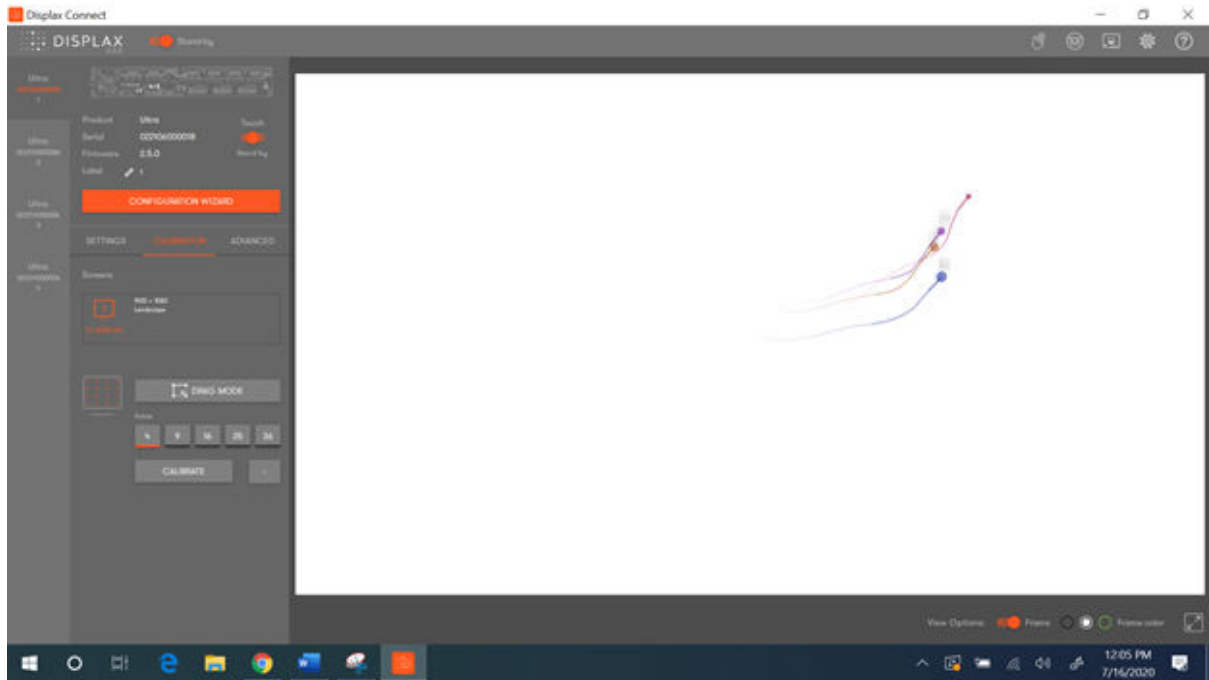

8. Locate the toggle button for "Touch" and ensure it is in the "ON" position.
  - Touch Disabled: Toggle button is white (or grey) and in the left position
  - Standby mode: Toggle button is orange and in the middle position
  - Touch Enabled (Active): Toggle button is orange and in the right position

**Touch status set to OFF**

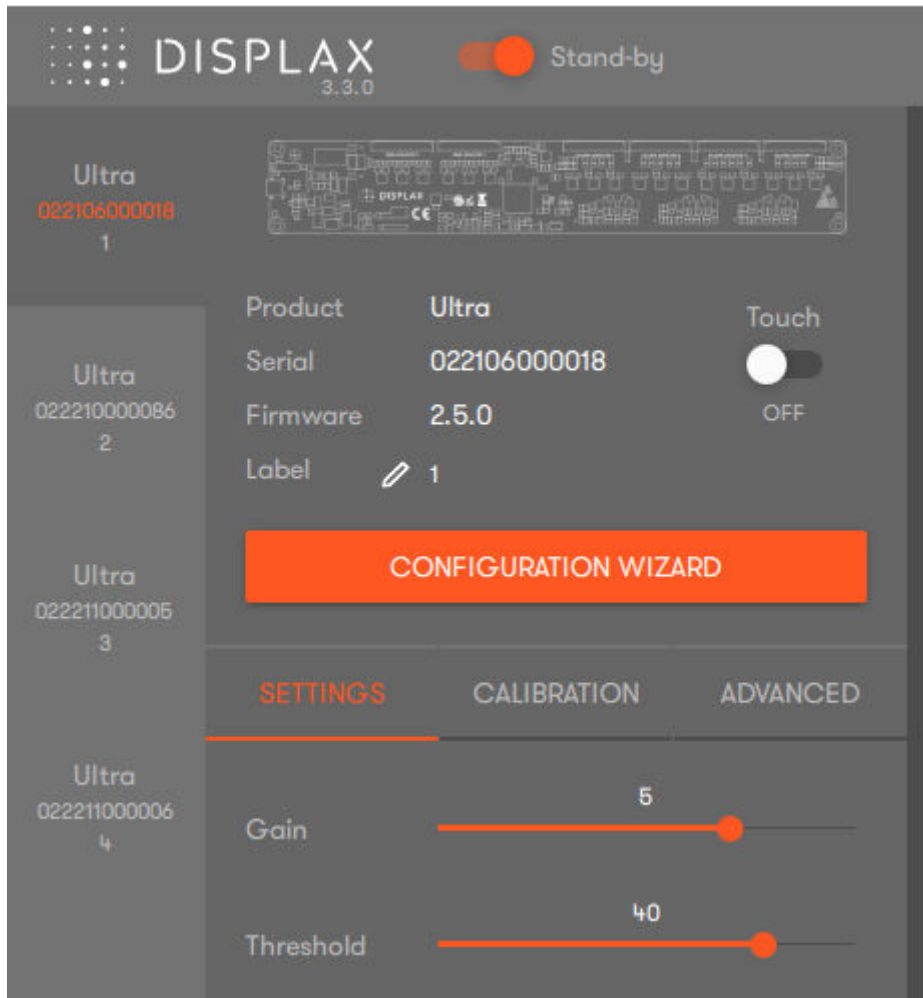

Touch Status set to ON



DISPLAX  
3.3.0

Stand-by

Ultra  
022106000018  
1



Ultra  
022210000086  
2

Product Ultra  
Serial 022106000018  
Firmware 2.5.0  
Label 1

Touch  
  
ON

Ultra  
022211000005  
3

CONFIGURATION WIZARD

SETTINGS

CALIBRATION


ADVANCED

Ultra  
022211000006  
4

Gain 5

Threshold 40

## Touch Status set to Stand-by

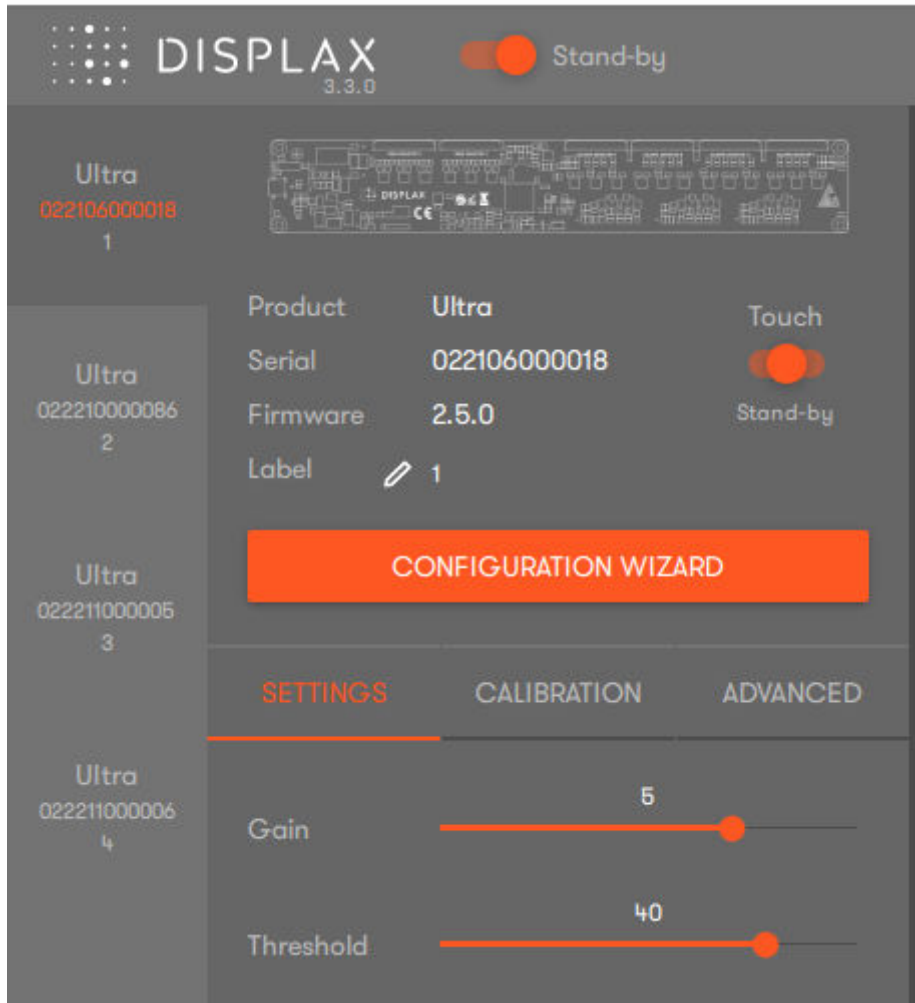

9. After setting the touch status “ON”, close the Displax Connect software in order to save the setting in the touch screen controller. If the Connect software is not closed, and the USB cable is unplugged from the device running the Connect software, the Touch Status setting change **will not be saved and touch may not function**. If this happens, repeat steps 8 through 9 and ensure the Connect software is closed properly.

**Note:** Repeat Steps 8-9 for each Monitor as needed.

10. If the above steps do not resolve the issue, please contact the TSI Touch Customer Service team at 802-874-0123 Option 2; email: [support@tsitouch.com](mailto:support@tsitouch.com); or by visiting our [TSI Touch website](#) and clicking on the red “Help” icon in the lower right corner of the webpage.